METER OF NETWORK PARAMETERS

ND10 TYPE

USER'S MANUAL

Contents

1. APPLICATION 3
2. METER SET 3
3. BASIC REQUIREMENTS AND OPERATIONAL SAFETY 3
4. INSTALLATION 3
5. METER DESCRIPTION 4
6. ND10 METER PROGRAMMING 7
7. SOFTWARE UPGRADE 16
8. RS-485 INTERFACE 17
9. ERROR CODES 24
10. TECHNICAL DATA 24
11. ORDERING CODES 28

1 APPLICATION

The ND10 meter is a digital programmable panel meter destined for the measurement of the 3-phase, 4-wire power network parameters in balanced and unbalanced systems. It is also capable of displaying measured quantities and their simultaneous digital transmission. The meter is also capable of controlling and optimization of the power electronic devices, systems, and industrial installations.
The meter can be used for measuring: RMS value of voltage and current; active, reactive and apparent power; active and reactive energy, power parameters; frequency, 15-, 30- and 60-minute mean active power and THD. Additionally, a current in the neutral wire is calculated from the phase current vectors . Voltage and current values are multiplied by given voltage and current ratios of measuring transformers. Power and energy indications take into account all programmed ratio values. Any and all measured values can be sent to the master via the RS-485 interface. The relay outputs signal alarm when selected parameters exceed set limits. Impulse output can be used for consumption check of the 3-phase real energy. This meter is also able to detect and signal incorrect phase sequence.
The meter is powered by the measuring circuit, i.e. from the voltage output.
There is a galvanic separation between following units of the meter:

- voltage and current inputs,
- RS-485 output,
- impulse output.

2 METER SET

Complete set of the meter includes:

- ND10 Meter	1 pcs.
- user's manual	1 pcs.
- warranty card	1 pcs.
- seal	1 pcs.
- panel mounting bracket	4 pcs.

3 BASIC REQUIREMENTS, OPERATIONAL SAFETY

ND10 Meter fully conforms with the requirements of EN 61010-1 standard.

Additional comments concerning safety:

- The meter should be installed and connected only by a qualified personnel. All relevant safety measures should be observed during installation.
- Always check the connections before turning the meter on.
- Removal of the meter housing during the warranty period voids the warranty.
- This meter conforms to all requirements of the electromagnetic compatibility in the industrial environment.
- Building power network should include switch or automatic circuit breaker positioned in the convenient vicinity of the meter. It should be properly marked and available to operator at all times.

4 INSTALLATION

ND10 Meter is adapted to be mounted to the panel with mounting brackets (see Fig. 1). Meter housing is made of plastic.

Housing dimensions: 96 x 96 x 77 mm. On the outer side of the meter there are screw and tab terminal strips that can be used for connecting external wires with diameter up to 2.5 mm^2.

Prior to installation a $92{,}5^{+0.6}$ x $92{,}5^{+0.6}$ mm slot must be made in the panel. The thickness of the panel material should not exceed 15 mm. The meter must be placed in the panel from the front. During installation the powering voltage must be off. When the panel is inserted in the slot, mount it in place with provided mounting brackets.

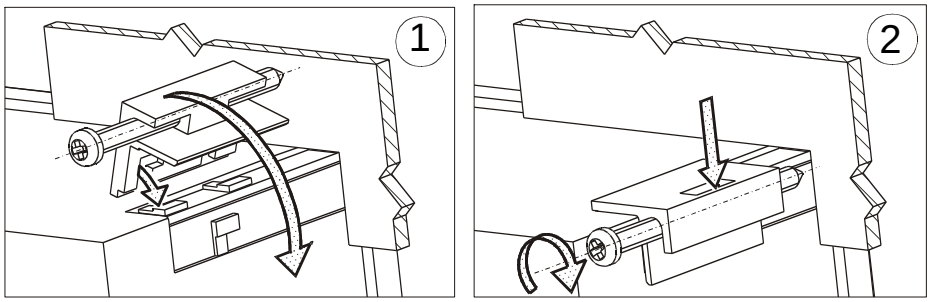

Fig. 1. Meter fitting

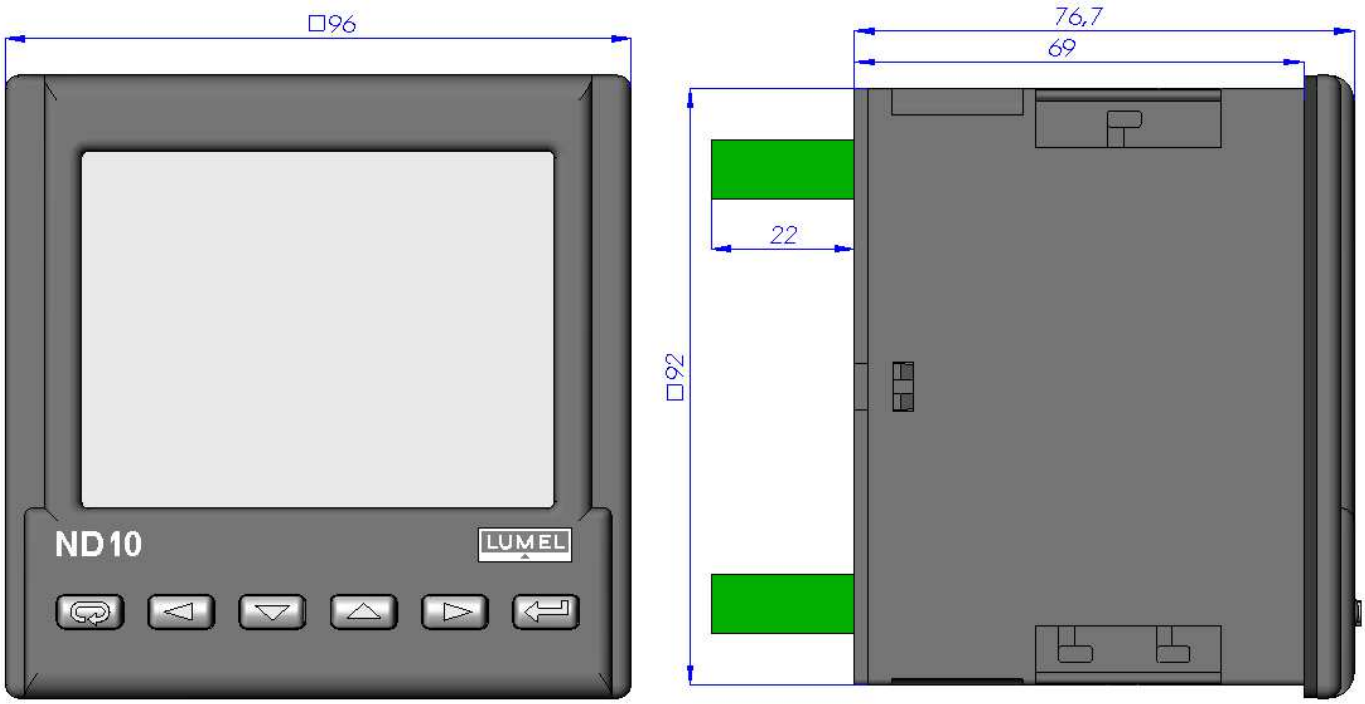

Fig. 2. Meter dimensions

5 METER DESCRIPTION

5.1 Current inputs

All current inputs are galvanically isolated (internal current transformers). The meter is suited to operate together with external measuring current transformers. Displayed values of currents as well as their derivative values are automatically calculated using set ratio value of the external transformer. Current inputs are specified in the order as either 1 A or 5 A.

5.2 Voltage inputs

Displayed values of voltages as well as their derivative values are automatically calculated using set ratio value of the external transformer. Voltage inputs are specified in the order as either 3 x 57.7/100 V, 3 x 230/400 V or 3 x 290/500 V.

5.3 Connection diagrams

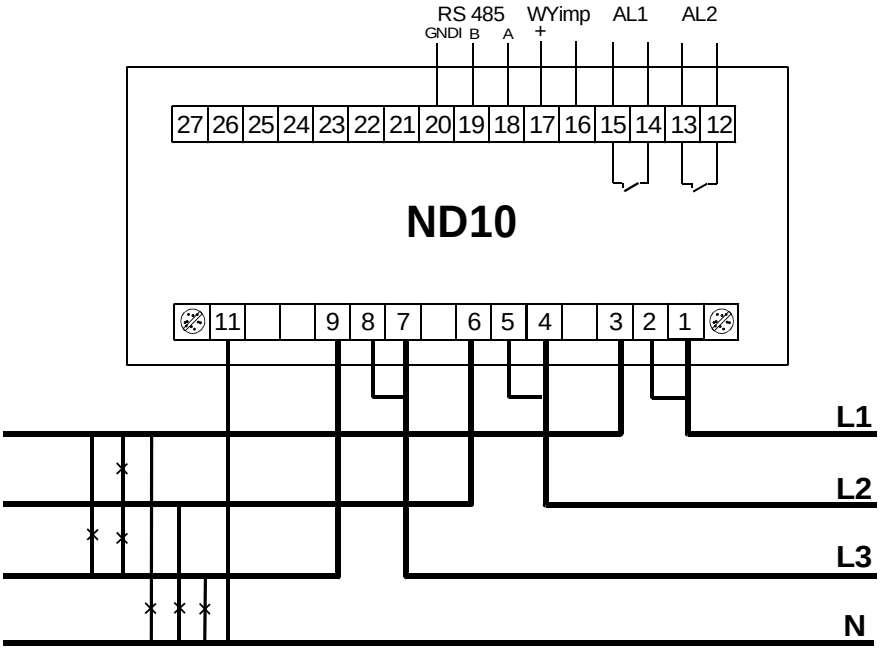

Direct measurement
in a 4-wire network

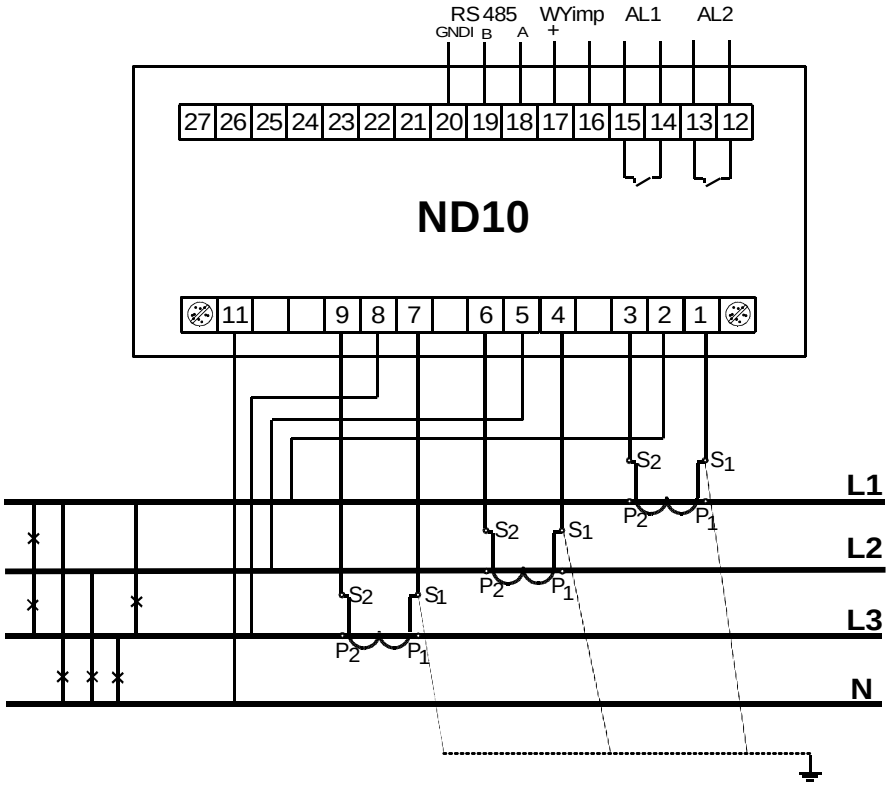

Semi-indirect measurement
in a 4-wire network

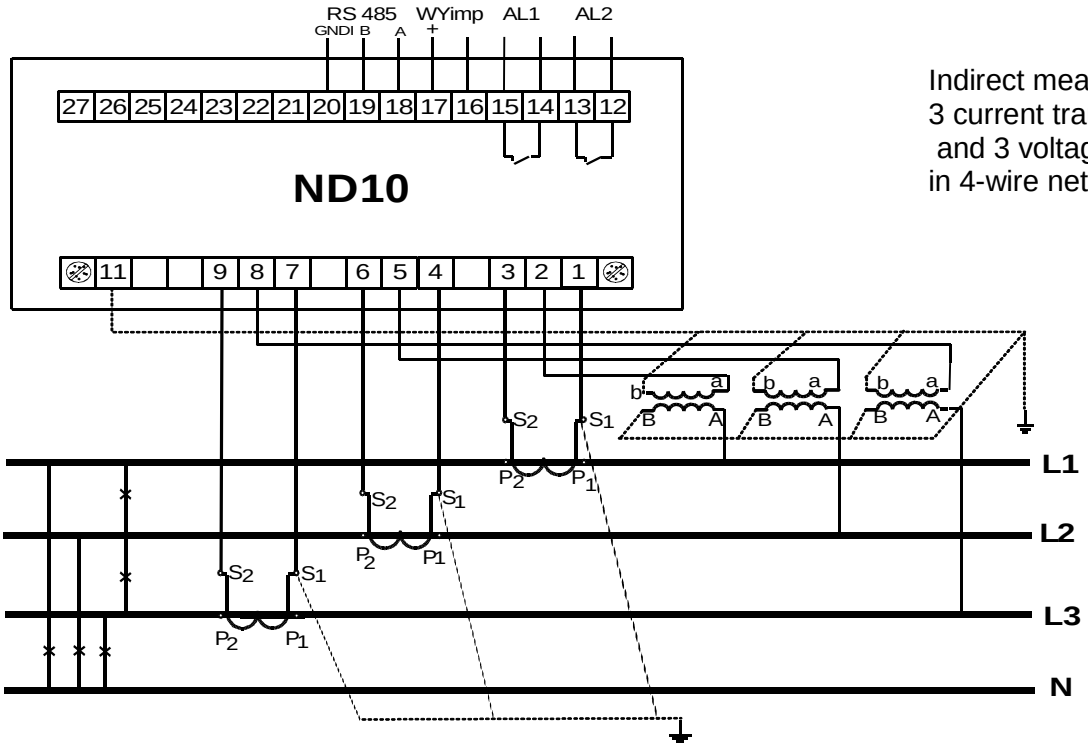

Indirect measurement using
3 current transformers
and 3 voltage transformers
in 4-wire network

Caution: It is recommended to connect ND10 meters (RS-485) to a computer with a shielded wire. A shield should be connected to ground in a single point. Shielded wire must be used in case there are many interferences in the environment.

Fig 4. Connection diagrams of the meter in the 4-wire network.

6 ND10 METER PROGRAMMING

6.1 Front panel

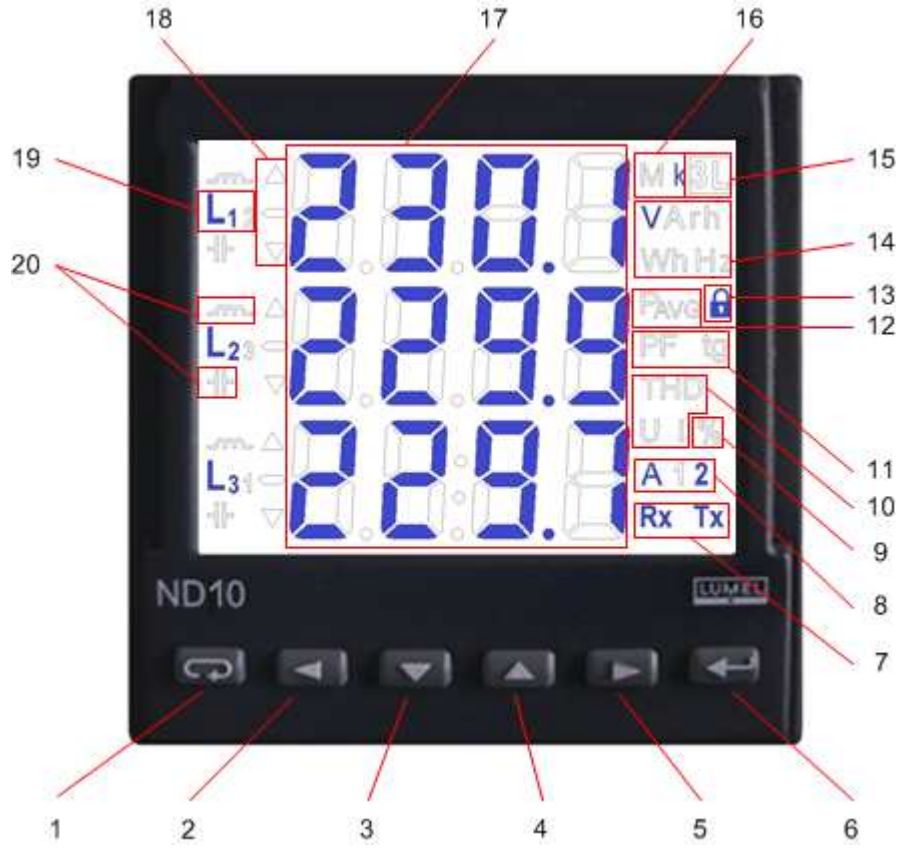

Fig. 5. Front panel

Front panel description:

1 – cancel button (ESC) 2 – move left button 3 – decrease value button 4 – increase value button 5 – move right button 6 – confirm button (ENTER) 7 – digital data transmission symbols 8 – connection / alarm symbols 9 – unit at displaying THD and power guard 10 – THD value display symbols 11 – power coefficient and power tangent display symbol	12 – mean active power value display symbol 13 – menu safety symbol 14 – units of the displayed values 15 – 3-phase values display symbol 16 – base values ratios 17 – field for displaying base values, power, THD, date, mean values, frequency, time and power guard 18 – min / max value symbols 19 – symbols of value-phase connection 20 – power and energy characteristics symbol

6.2 Power-on messages

After connection of voltage inputs the meter performs a display test and displays the ND10 meter name, build and current software version.

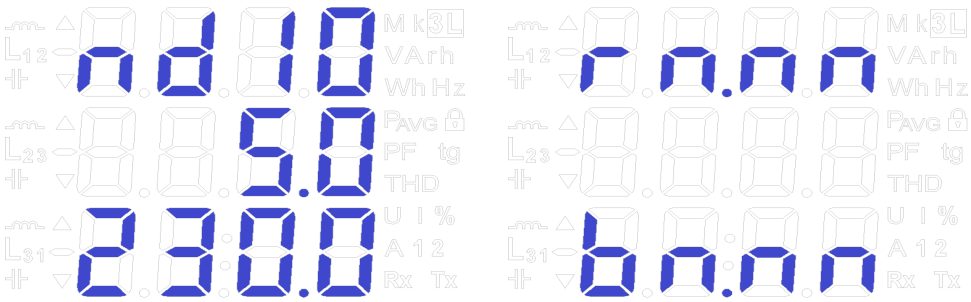

where: r n.nn is a number of the current software version or special build number.

b n.nn is a bootloader version number.

Fig. 6. Meter start messages

Caution! If the display shows Err Cal or Err EE message, please contact the maintenance service.

6.3 Parameter display

In the measurement mode, values are displayed according to set tables. Pressing button ◄ (left) or ► (right) allows user to switch between displayed base values (table 1). Pressing button ▼ (down) displays minimal value and pressing button ▲ (up) displays maximal value. When these values are displayed, pressing the ESC button resets all minimal or maximal values. When buttons ▼ and ▲ are pressed simultaneously, respective mean 3-phase values are displayed, together with minimal and maximal values (see Table 2).
RS-485 interface allows setting the values that are to be displayed.

Error display is described in section 8.

When reactive power is displayed, this indication is accompanied by a symbol of the load: capacity load (⊣⊢) or inductive load (≈).

Base values displayed in the field 17 (Fig. 5.). Option (parameter) shown in the Table 1 indicated that displaying of this parameter may be turned off in register 4056 via RS485. Turning this parameter off (from U to tg) disables displaying their respective mean / 3-phase values.

Table 1

Displayed symbols		L_1,V L_2, L_3	L_{12},V L_{23}, L_{31}	L_1,A L_2, L_3	L_1,W L_2, L_3	L_1,Var L_2, L_3	L_1,VA L_2, L_3	L_1,PF L_2, L_3	L_1,tg L_2, L_3	kWh
Values displayed	row 1	U1	U12	I1	P1	Q1	S1	PF1	tg1	Active energy consumed
	row 2	U2	U23	I2	P2	Q2	S2	PF2	tg2	
	row 3	U3	U31	I3	P3	Q3	S3	PF3	tg3	
Display		fixed	optional	fixed	fixed	optional	optional	optional	optional	optional

Displayed symbols		-, kWh	kVarh	kVarh	L_1, THD U L_2, L_3	L_1, THD I L_2, L_3,
Values displayed	row 1	Active output energy	Reactive energy (inductive) / Reactive energy (positive)	Reactive energy (capacity) / Reactive energy (negative)	THD U1 %	THD I1 %
	row 2				THD U2 %	THD I1 %
	row 3				THD U3 %	THD I1 %
Display		optional	optional	optional	optional	optional

Displayed symbols		HZ	3L, W P_{AVG}	A	%	Date/time
Values displayed	row 1	f(L3)	$\Sigma P_{3\text{-phase}}$ (15, 30 or 60 min.)	$I_{(N)}$	Ordered power consumption (within 15, 30 or 60 min.)	Year
	row 2	min	min	min		Month.day
	row 3	max	max	max		Hours : minutes
Display		optional	optional	optional	optional	optional

Mean values and corresponding minimal and maximal values (when pressed ↵ on the first 8 base value screens, following markers are highlighted: 3L, △,▽) .

Table 2

Displayed symbols		3L, V	3L, V	3L, A	3L, W	3L, Var	3L, VA	3L, PF	3L, tg
Values displayed	row 1	$U_{LNav.}$ 3-phase	$U_{LLav.}$ 3-phase	$I_{av.}$ 3-phase	P	Q	S	PF	tg
	row 2	min	min	min	min	min	min	min	min
	row 3	max	max	max	max	max	max	max	max

When upper limit of the indication range is exceeded, it is indicated by two horizontal lines in upper part of the display. Conversely, when lower limit is exceeded, it is indicated by two horizontal lines in the lower part of the display. When mean power is measured $\Sigma P_{3\text{-phase}}$ separate measurements are made for 15-second quantum. Depending on chosen value (15 min, 30 min, 60 min) calculated mean value is based on 60, 120 or 240 measurements. After the meter is turned on or after the power is reset, the first value will be calculated in 15 seconds after turning meter on or resetting. Until all probed values of the active power are acquired, mean power value is calculated from values already measured. Current in the neutral wire $I_{(N)}$ is calculated from phase current vectors.
When alarms are activated, symbols A1 and/or A2 are displayed. When alarms are deactivated and alarm signalization latch is turned on, flashing symbols A1 and/or A2 are displayed.

6.4 Operating modes

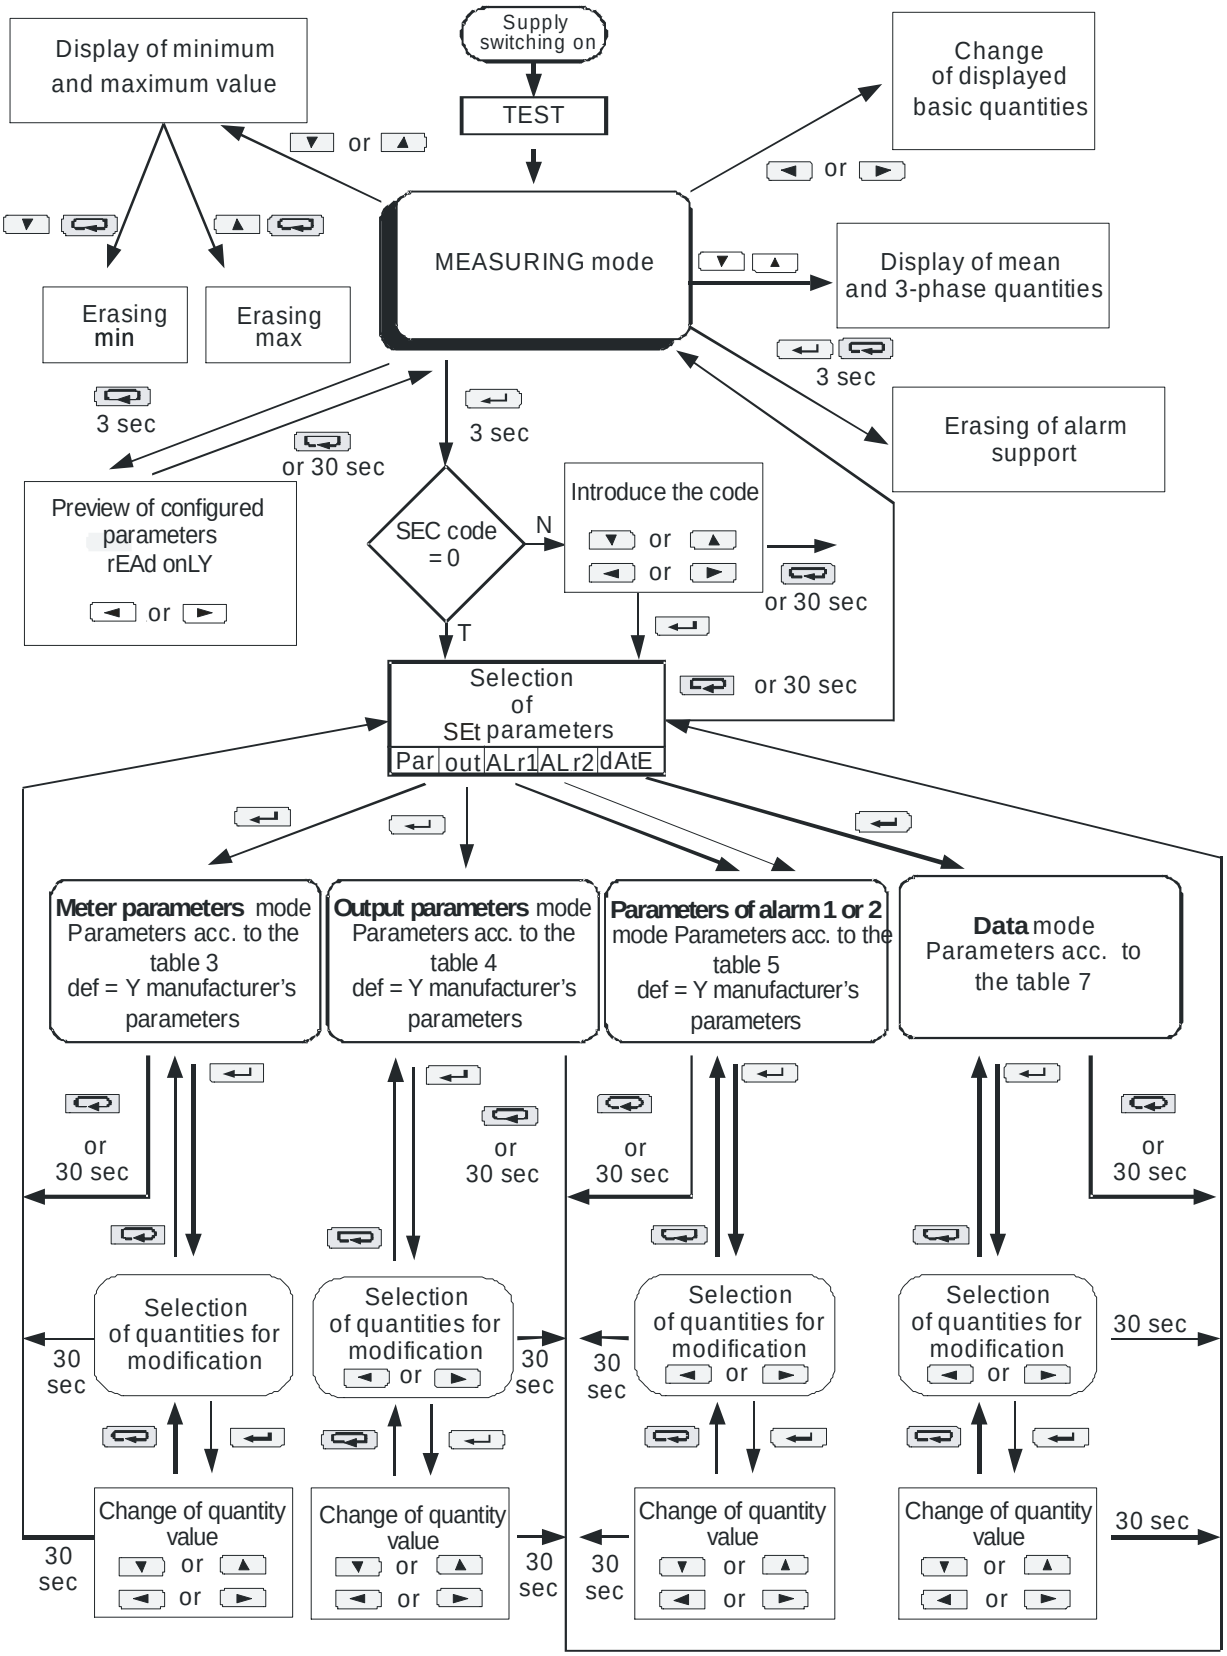
Supply switching on
TEST
MEASURING mode
Display of minimum and maximum value
Erasing min
Erasing max
Change of displayed basic quantities
Display of mean and 3-phase quantities
Erasing of alarm support
3 sec
or 30 sec
Preview of configured parameters rEAd onLY
SEC code = 0
N
T
Introduce the code
Selection of SEt parameters
Par out ALr1 ALr2 dAtE
Meter parameters mode Parameters acc. to the table 3 def = Y manufacturer's parameters
Output parameters mode Parameters acc. to the table 4 def = Y manufacturer's parameters
Parameters of alarm 1 or 2 mode Parameters acc. to the table 5 def = Y manufacturer's parameters
Data mode Parameters acc. to the table 7
Selection of quantities for modification
Change of quantity value
30 sec

Fig. 7. ND10 meter operating modes

6.5 Parameter setting

ND10 meters are configured with the use of LPCon software available for free on the www.lumel.com.pl web site.

Fig 8. Setup menu

Programming mode is enabled by pressing and holding ↵ button for about 3 seconds. To enable the programming user bust enter a correct access code. If there is not such a code, the program transits into the programming option. Message **SET** (in the first row) and first parameter group **PAr** are displayed. User can view parameters at any time by pressing and holding ↩ button for about 3 seconds.

6.5.1 Setting of Meter Parameters

In options menu choose **PAr** (using ▼ or ▲ buttons) and confirm selection with the ↵ button.

Table 3

Item	Parameter name	Marking	Range	Notes/description	Manufacturer's value
1	Access code entry	SEC	oFF, 1 … 60000	0 – no code	0
2	Current transformer ratio	tr_I	1 … 10000		1
3	Voltage transformer ratio	tr_U	0.1 … 4000.0		1
4	Mean active power synchronization	Syn	15, c_15, c_30, c_60	Mean active power synchronization: 15 - 15-minute moving window c_15 – measurement synchr. with clock every 15 min. c_30 – measurement synchr. with clock every 30 min. c_60 – measurement synchr. with clock every 60 min.	15
5	Recording minimal and maximal values complete with errors	erLi	oFF, on	oFF – recording only correct values (within measurement range), on – recording all errors occurring in measurements (values in 1e20 and -1e20 registers)	on
6	Method of reactive energy calculation	En_q	cAP, sIGn	cAP – inductive and capacity energy sIGn – positive and negative energy	cAP
7	Display panel illumination	diSP	oFF,1…60, on	off, on, 1..60 – illumination time (in seconds) from pressing the button	on
8	Energy counters	En_0	no, EnP,	no – no activity, EnP – erase active	no

	erasing		Enq, ALL	energy, Enq – erase reactive, ALL – erase all energies	
9	Mean active power erasing	PA_0	no, yES	yES – erase power	no
10	Ordered power	PAor	0 … 144.0	Power ordered to establish power consumption in % of rated power	100
11	Default settings	dEf	no, yES	reverting to default (factory) group settings	no

The automatic erasing of energy is carried out:
- for active energy when changing: voltage or current ratio;
- for reactive energy when changing: voltage or current ratio, reactive energy calculation method;

Buttons ▼ and ▲ are used for setting the values while buttons ◄ and ► are used for choosing position of the number to be set. The active position is signaled by the cursor. Set value can be accepted by pressing the ↵ button or canceled by pressing the ⊂ button. When value is to be accepted, it is checked against the acceptable value range. If the set value falls outside the allowable range, the meter remains in parameter setting mode and the value is set to the highest possible value (when entered value is too high) or lowest possible value (when it is too low).

6.5.2 Setting of Output Parameters

In Options choose the **out** mode and confirm your choice by pressing the.↵button.

Table 4

Item	Parameter name	Marking	range	Notes/description	Manufacturer's value
1	# of impulses.	Io_n	5000 … 20000	# of impulses per kWh	5000
2	MODBUS Network Address	Adr	1 … 247		1
3	Transmission mode	trYb	8n2, 8e1, 8o1, 8n1		8n2
4	Transmission speed	bAUd	4.8 k, 9.6 k, 19.2 k, 38.4 k		9,6 k
5	Default settings	dEf	no, yES	reverting to default (factory) group settings	no

6.5.3 Setting alarm parameters

In Options choose **ALr1** or **ALr2** mode and confirm your selection by pressing the ↵button.

Table 5

Item	Parameter name	Marking	range	Notes/description	Manufacturer's value
1	Value on alarm output (code as in Tab. 6)	A1_n, A2_n	table 6		P
2	Alarm type	A1_t, A2_t	n-on, n-oFF, on,oFF, H-on, H-oFF	Fig. 9.	n-on
3	Lower value of the input range	A1oF, A2oF	-144.0 … 144.0	in % of the rated quantity value	99.0
4	Upper value of the input range	A1on, A2on	-144.0 … 144.0	in % of the rated quantity value	101.0
5	Time delay of the switch	A1dt,	0 … 900	in seconds (for A1_n = P_ord,	0

	reaction	A2dt		delay occurs only when alarm is activated)	
6	Alarm signalization latch	A1_S, A2_S,	oFF, on	When alarm signalization latch is enabled and the alarm state ends, alarm symbol is not turned off but begins to flash. Alarm symbol flashes until it is turned off by pressing both ⮌ and ↵ buttons (for 3 seconds). This function refers only to the alarm signalization, so the relay connectors will operate without support according to the selected alarm type.	oFF
7	Alarm re-activation block	A1_b, A2_b,	0 … 900	in seconds	0
8	Default settings	dEf	no, yES	reverting to default (factory) group settings	no

The write of the value ALon lower than ALoF switches the alarm off.

Selection of the monitored value:

Table 6

Item / value in 4015 register	**Displayed element**	**Quantity type**	**Value needed for calculations of percentage outputs and alarm values (100 %)**
00	oFF	no quantity /alarm disabled/	none
01	U_1	L1 phase voltage	Un [V] *
02	I_1	L1 phase wire current	In [A] *
03	P_1	L1 phase active power	Un x In x cos(0°) [W] *
04	q_1	L1 phase reactive power	Un x In x sin(90°) [var] *
05	S_1	L1 phase apparent power	Un x In [VA] *
06	PF1	L1 phase active power factor	1
07	tg1	tg factorφ of L1 phase	1
08	U_2	L2 phase voltage	Un [V] *
09	I_2	L2 phase wire current	In [A] *
10	P_2	L2 phase active power	Un x In x cos(0°) [W] *
11	q_2	L2 phase reactive power	Un x In x sin(90°) [var] *
12	S_2	L2 phase apparent power	Un x In [VA] *
13	PF2	L2 phase active power factor	1
14	tg2	tg factorφ of L2 phase	1
15	U_3	L3 phase voltage	Un [V] *
16	I_3	L3 phase wire current	In [A] *
17	P_3	L3 phase active power	Un x In x cos(0°) [W] *
18	q_3	L3 phase reactive power	Un x In x sin(90°) [var] *
19	S_3	L3 phase apparent power	Un x In [VA] *
20	PF3	L3 phase active power factor	1
21	tg3	tg factorφ of L3 phase	1
22	U_A	mean 3-phase voltage	Un [V] *
23	I_A	mean 3-phase current	In [A] *
24	P	3-phase active power (P1+P2+P3)	3 x Un x In x cos(0°) [W] *

25	q	3-phase reactive power (Q1+Q2+Q3)	3 x Un x In x sin(90°) [var] *
26	S	3-phase apparent power (S1+S2+S3)	3x Un x In [VA] *
27	PF_A	3-phase active power factor	1
28	tg_A	tg factorφ for 3 phases	1
29	FrEq	frequency	100 [Hz]
30	U12	phase-to-phase voltage L1-L2	$\sqrt{3}$ Un [V] *
31	U23	phase-to-phase voltage L2-L3	$\sqrt{3}$ Un [V] *
32	U31	phase-to-phase voltage L3-L1	$\sqrt{3}$ Un [V] *
33	U4_A	mean phase-to-phase voltage	$\sqrt{3}$ Un [V] *
34	P_At	mean active power	3 x Un x In x cos(0°) [W] *
35	P_ord	used % of the ordered active power (used energy)	100 [%]
36	I_ne	neutral wire current	In [A] *

*Un, In – voltage and current rated values

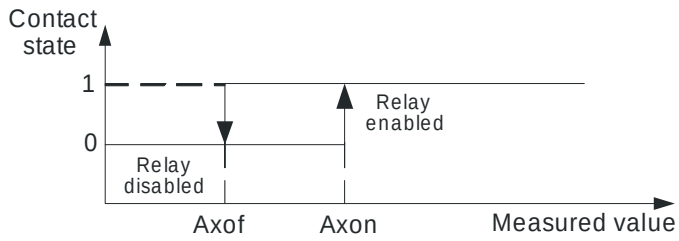

a) **n-on**

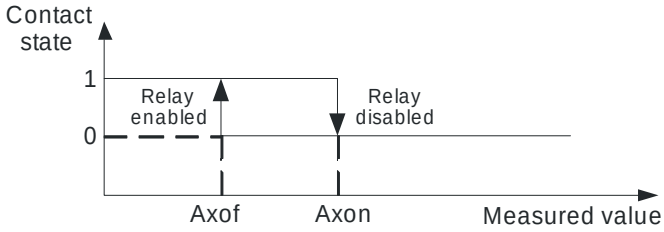

b) **n-oFF**

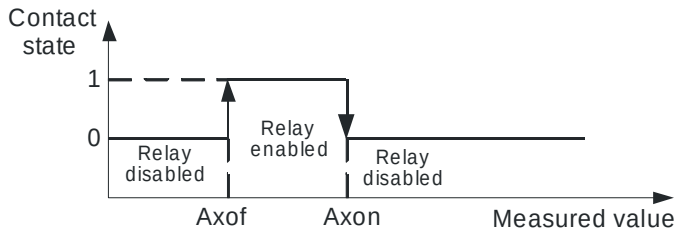

c) **On**

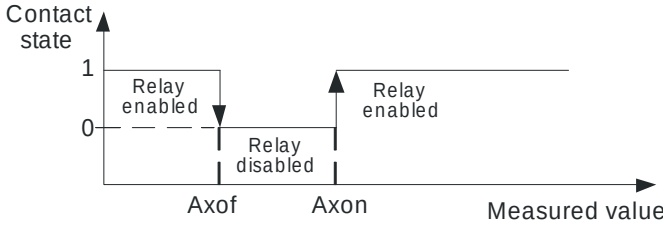

d) **OFF**

Fig. 9. Alarm types (x – alarm no.): a),b) normal c) off d) on.

Remaining types of the alarm:

- H-on – always on;
- H-oFF – always off.
-

Example 1 of alarm setting:

Set **n-on** alarm type for monitored quantity P – 3-phase active power,
Version: 5 A; 3 x 230/400 V. Setting the alarm on after exceeding 3800 W, switching the alarm off after power drops to 3100 W.
Calculations:: rated 3-phase active power: P = 3 x 230 V x 5 A = 3450 W

3450 W – 100 %	3450 W – 100 %
3800 W – A1on %	3100 W – A1oF %

In conclusion: A1on = 110,0 % A1oF = 90,0 %
Set: Monitored quantity: P; type of alarm: n-on, A1on 110,0, A1oF 90,0.

Example no 2 of alarm setting:
The value of ordered power consumption may be used for the purpose of prior warning that ordered power might be exceeded. Ordered power consumption is calculated according to time period set for the mean active power synchronization and value of the ordered power. Pre-emptive alarm should be set so that it indicates the possibility of exceeding ordered power of 1MW at 90 % assuming allocation of 15-minutes (900 s). Measuring current transformer 2500: 5A, voltage 230 V. Peak max power consumption 1,5 MW.

Calculations::
ND10 meter active rated 3-phase power: P = 3 x k_U x U_n x k_I x I_n = 3 x 1 x 230 V x 500 x 5A = 1,725 MW $\rightarrow$ 100 %.
Ordered-to-rated power ratio = 1 MW / 1.725 MW $\approx$ **57,97** % of meter rated value (rounded down) - **Pord**;
Alarm operation hysteresis: alarm should be activated at **90 %** ordered power (**A1on**), and deactivated for e.g.: at 1 % lower **89 %** (**A1of**).
Optimization of power limit function (delay at alarm activation):

alarm activation delay $t_o = 10\% * \left[\frac{1\,MW * 900\,s}{1{,}5\,MW} \right] = 60\,s$ (**A1dt**) .

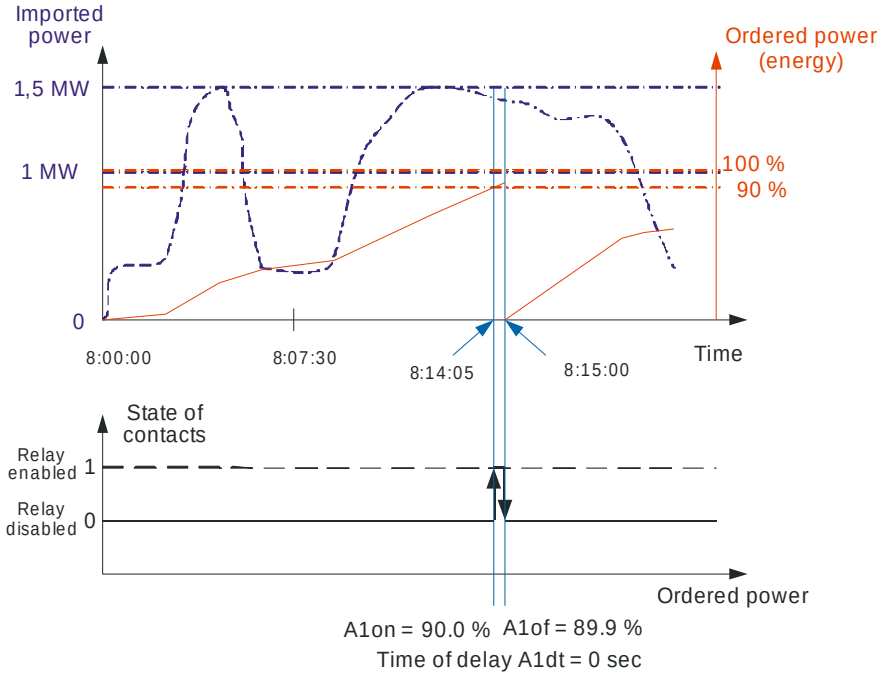

Fig. 10. Measurement of used ordered 15 minutes' active power consumption synchronized with the clock, with alarm set on a 90% consumption.

Fig. 10 shows an example of how the consumed ordered active power parameter can be used to alarm activation. Delay time is set at 0 seconds (**A1dt**). In presented example for the remaining 10 % of ordered power at maximum power consumption, all devices could operate for additional 60 seconds without imposing penalties. If the delay time **A1dt** had been set to 60 seconds, alarm would not have been activated.

Set alarm as following: monitored quantity: A1_n = P_ord; alarm type: A1_t = n-on; A1on = 90,0, AL1oF = 89,9; delay time A1dt = 0 or 60 s; A1_s = 0; A1_b = 0. Parameters should be set as following: tr_I = 500; Syn = 15 or c_15, and Pord = 57.9.

6.5.4 Setting Date and Time

In Options choose dAtE **mode** and confirm the selection with ↵ button. Seconds are reset to 0 after hour and minute values are set.

Table 7

Item	Parameter name	Marking	range	Manufacturer's value
1	Hour, minute	t_H	0…23, 0..59	00.00
2	Month, day	t_d	1…12, 1…31	1.01
3	Year	t_y	2001 … 2100	2001

7 Software upgrade

ND10 meter (with digital output) allows for firmware upgrade via PC with LPCon software installed. LPCon software is available as freeware on the www.lumel.com.pl web site. Upgrade is possible if PC is connected to RS485 to USB converter, such as PD10 converter.

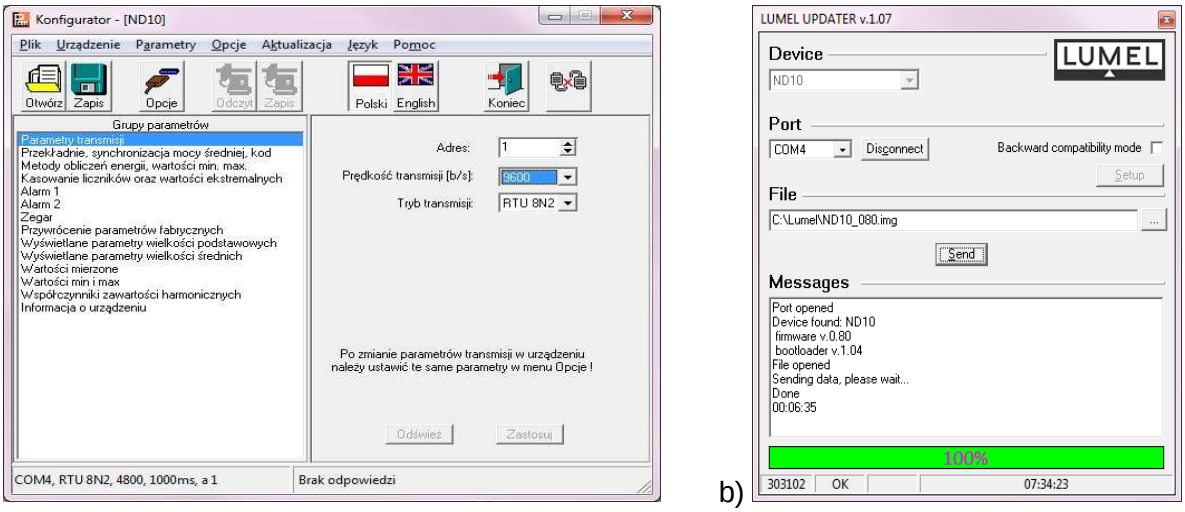

Fig. 11. Program window view: a) LPCon, b) software upgrades

Important! Software upgrade automatically reverts meter to its default (factory) settings, so it is recommended to save meter settings with LPCon software before upgrading.

After launching LPCon program, set in *Options* required serial port, speed, mode and address of the meter. Next, choose ND10 meter from *Devices* menu and click the *Read* icon to read all set parameters (required for later recovery). After choosing *Device software upgrade* option from *Upgrade* menu a *Lumel Updater* window appears(LU) – Fig. 11 b. Press *Connect*. The *Messages* information window displays information concerning upgrade process. If the port is opened correctly, a *Port opened* message appears. Upgrade mode may be entered using either of the two methods: remotely via LU (using LPCon settings: address, mode, speed, COM port) or by switching on a meter with a button ↵ pressed (while entering bootloader mode, upgrade button is used to set default communication settings of the meter). Meter display shows the "boot" message and the software version while the LU program displays *Device found* message along the name and version of the software of connected device. Click the *...* button and browse to the meter upgrade file. If the file is opened correctly, a *File opened* message is displayed. Press the *Send* button. When upgrade is successfully completed, meter reverts to the default settings and begins normal operation while the information window displays *Done* message and upgrade elapsed time. After the LU window is closed, click the *Save* icon to save all initially read parameters. Current software version can be checked by reading *Device information* from LPCon software.

Important! Turning the meter off during upgrade process may result in permanent damage!

8 RS-485 INTERFACE

Overview of the ND10 serial port parameters.

- identifier 0xCB
- meter address 1..247
- transmission speed 4.8, 9.6, 19.2, 38.4 kbit/s,
- operation mode Modbus RTU,
- transmission mode 8N2, 8E1, 8O1, 8N1,
- max. response time 750 ms.
- max. no. of registers read in a single query
  - 40 4-byte registers,
  - 80 2-byte registers,
- implemented functions
  - 03,06,16, 17,
  - 03 register read,
  - 06 1st register write,
  - 16 register write,
  - 17 device identification,

Manufacturer's settings: address 1, speed 9.6 kbit/s, mode RTU 8N2,

ND10 meter register map

ND10 meter has data contained in 16-bit and 32-bit registers. Process variables and meter parameters are placed in the address area of registers in a way depended on the variable value type. Bits in 16-bit registers are numbered from the youngest to the oldest (b0-b15). 32-bit registers include numbers of float type in IEEE-754 standard. Sequence of 3210 bytes – the oldest is transmitted as the first.

Table 8

Address range	Value type	Description
4000 – 4057	Integer (16 bits)	Value set in the 16-bit register. Register description is presented in Table 9. Read and write registers.
7000 – 7319	Float (2x16 bits)	Value is set in the two following 16-bit registers. These registers contain the same data as 32-bit registers from 7500 – 7659 range. Readout registers. Bit sequence (3-2-1-0)
7500 – 7659	Float (32 bits)	Value set in the 32-bit register. Register description is presented in Table 10. Readout registers.

Table 9

Register address	Operations	Range	Description	Default
4000	RW	0 … 60000	Protection - password	0
4001			reserved	
4002	RW	0...1200 [‰]	Mean ordered power *10 nominal signals	1000
4003	RW	1 … 10000	Current transformer ratio	1
4004	RW	1 … 40000	Voltage transformer ratio *10	10
4005	RW	0..3	Mean active power synchronization: 0 - 15-minute moving window 1 – measurement synchr. with clock every 15 minutes,	0

			2 – measurement synchr. with clock every 30 minutes, 3 – measurement synchr. with clock every 60 minutes,	
4006			reserved	
4007	RW	0.1	Max and min value saving method: 0 – no errors, 1 – with errors	0
4008			reserved	
4009	RW	0.1	Reactive energy calculation method: 0 – inductive and capacity energy 1 – positive and negative energy	0
4010	RW	0 … 61	Display panel illumination: 0 – off, 1-60 – illumination time in seconds from pressing the button; 61 – always on	61
4011	RW	0 … 3	Energy counters erasing 0 – no changes, 1 – erase active energies, 2 – erase reactive energies, 3 – erase all energies	0
4012	RW	0.1	Erasing mean active power P_{AV}	0
4013			reserved	
4014	RW	0.1	Min and max erasing	0
4015	RW	0.1..35	Quantity on the relay output of alarm 1 (code as in Table 6)	24
4016	RW	0..5	Output type 1: 0 – n-on, 1– n-oFF, 2 – on, 3 – oFF, 4 – H-on, 5 – H-oFF	0
4017	RW	-1440..0..1440 [‰]	Lower value of the alarm 1 switch of the rated input range	990
4018	RW	-1440..0..1440 [‰]	Upper value of the alarm 1 switch of the rated input range	1010
4019	RW	0..900 s	Alarm 1 switch delay value (for AL_n = P_ord – register 4015 = 35, delay occurs only at alarm activation)	0
4020	RW	0.1	Alarm 1 signalization latch	0
4021	RW	0..900 s	Alarm 1 re-activation block	0
4022	RW	0.1..35	Quantity on the relay output of alarm 2 (code as in Table 6)	24
4023	RW	0..5	Output type 1: 0 – n-on, 1– n-oFF, 2 – on, 3 – oFF, 4 – H-on, 5 – H-oFF	0
4024	RW	-1440..0..1440 [‰]	Lower value of the alarm 2 switch of the rated input range	990
4025	RW	-1440..0..1440 [‰]	Upper value of the alarm 2 switch of the rated input range	1010
4026	RW	0..900 s	Alarm 2 switch delay value (for AL_n = P_ord – register 4015 = 35, delay occurs only at alarm activation)	0
4027	RW	0.1	Alarm 2 signalization latch	0
4028	RW	0..900 s	Alarm 2 re-activation block	0
4029	RW	5000 … 20000	No. of impulses for the impulse output	5000
4030	RW	1..247	MODBUS Network Address	1
4031	RW	0..3	Transmission mode: 0->8n2, 1->8e1, 2->8o1, 3->8n1	0
4032	RW	0..3	Transmission speed: 0->4800, 1->9600	1

			2->19200, 3->38400	
4033	RW	0.1	Upgrade change of transmission parameters	0
4034	RW	0 … 2359	Hour *100 + minutes	0
4035	RW	101 … 1231	Month * 100 + day	101
4036	RW	2009 … 2100	Year	2009
4037	RW	0.1	Standard parameters save (complete with reseting energy as well as min, max and mean power to 0)	0
4038	RW	0..15258	Consumed active energy, two older bytes	0
4039	RW	0..65535	Consumed active energy, two younger bytes	0
4040	RW	0..15258	Released active energy, two older bytes	0
4041	RW	0..65535	Released active energy, two younger bytes	0
4042	RW	0..15258	Reactive inductive energy, two older bytes	
4043	R	0..65535	Reactive inductive energy, two younger bytes	
4044	R	0..15258	Reactive capacity energy, two older bytes	0
4045	R	0..65535	Reactive capacity energy, two younger bytes	0
4046			reserved	
4047			reserved	
4048			reserved	
4049			reserved	
4050	R	0..65535	Status Register – see description below	0
4051	R	0..65535	Status Register 2 – see description below	0
4052			reserved	
4053	R	0..65535	Serial number two older bytes	-
4054	R	0..65535	Serial number two younger bytes	-
4055	R	0..65535	Software version (*100)	-
4056	RW	0..65535	Quantity parameters displayed	0xFFFF
4057			reserved	

Brackets [ ] contain, respectively: resolution or unit.

Energy is made available in hundreds of watt-hours (var-hours) in double 16-bit register, and for this reason, one must divide them by 10 when calculating values of particular energy from registers, e.g.:

Consumed active energy = (reg. value 4038 x 65536 + reg. value 4039) / 10 [kWh]
Released active energy = (reg. value 4040 x 65536 + reg. value 4041) / 10 [kWh]
Reactive inductive energy = (reg. value 4042 x 65536 + reg. value 4043) / 10 [kVarh]
Reactive capacity energy = (reg. value 4044 x 65536 + reg, value 4045) / 10 [kVarh]

Status Register (address 4050, R):

Bit 15 – „1” – non-volatile memory damage

Bit 14 – „1” – no calibration or calibration error

Bit 13 – „1” – parameters value error
Bit 12 – „1” – energy value error
Bit 11 – „1” – phase sequence error
Bit 10 – current range „0” – 1 A~; 1” – 5 A~

Bit 9	Bit 8	voltage range
0	0	57,7 V~
0	1	230 V~

Bit 7 – „1” – power averaging interval has not ended

Bit 6 – „1” – frequency for THD calculation outside ranges:
- 48 – 52 for 50 Hz,
- 58 – 62 for 60 Hz

Bit 5 – „1” – voltage too low for measurement of frequencies
Bit 4 – „1” – L3 phase voltage too low
Bit 3 – „1” – L2 phase voltage too low
Bit 2 – „1” – L1 phase voltage too low
Bit 1 – „1” – RTC
Bit 0 – relay output state „1” – on, „0” - off

Status Register 2 – reactive power characteristics (address 4051, R):

Bits 15 ... 12 - reserved
Bit 11 – „1” – capacity 3L max,
Bit 10 – „1” – capacity 3L min.
Bit 9 – „1” – capacity 3L
Bit 8 – „1” – capacity L3 max.
Bit 7 – „1” – capacity L3 min.
Bit 6 – „1” – capacity L3
Bit 5 – „1” – capacity L2 max.
Bit 4 – „1” – capacity L2 min.
Bit 3 – „1” – capacity L2
Bit 2 – „1” – capacity L1 max.
Bit 1 – „1” – capacity L1 min.
Bit 0 – „1” – capacity L1

Configuration register of displayed base quantities parameters (address 4056, R/W):

Bit 15 – „1” – phase-to-phase display
Bit 14 – „1” – reactive power display
Bit 13 – „1” – apparent power display
Bit 12 – „1” – power factor display
Bit 11 – „1” – power tangent display
Bit 10 – „1” – consumed active power display
Bit 9 – „1” – released active power display
Bit 8 – „1” – reactive capacity energy display
Bit 7 – „1” – reactive inductive power display
Bit 6 – „1” – current THD display
Bit 5 – „1” – voltage THD display
Bit 4 – „1” – frequency display
Bit 3 – „1” – mean active power display
Bit 2 – „1” – neutral wire current display
Bit 1 – „1” – usage of ordered power display
Bit 0 – „1” – time and date display

Table 10

16-bit register address	Register address 32-bit	Operations	Description	Unit
7000	7500	R	L1 phase voltage	V
7002	7501	R	L1 phase current	A
7004	7502	R	L1 phase active power	W
7006	7503	R	L1 phase reactive power	var
7008	7504	R	L1 phase apparent power	VA
7010	7505	R	L1 phase power factor (PF)	-
7012	7506	R	L1 phase reactive to active power ratio	-
7014	7507	R	L2 phase voltage	V
7016	7508	R	L2 phase current	A
7018	7509	R	L2 phase active power	W
7020	7510	R	L2 phase reactive power	var
7022	7511	R	L2 phase apparent power	VA
7024	7512	R	L2 phase power factor (PF)	-

7026	7513	R	L2 phase reactive to active power ratio	-
7028	7514	R	L3 phase voltage	V
7030	7515	R	L3 phase current	A
7032	7516	R	L3 phase active power	W
7034	7517	R	L3 phase reactive power	var
7036	7518	R	L3 phase apparent power	VA
7038	7519	R	L3 phase power factor (PF)	-
7040	7520	R	L3 phase reactive to active power ratio	-
7042	7521	R	Mean 3-phase voltage	V
7044	7522	R	Mean 3-phase current	A
7046	7523	R	3-phase active power (P1+P2+P3)	W
7048	7524	R	3-phase reactive power (Q1+Q2+Q3)	var
7050	7525	R	3-phase apparent power (S1+S2+S3)	VA
7052	7526	R	Mean power factor (PF)	-
7054	7527	R	Mean reactive to active power ratio	-
7056	7528	R	Frequency	Hz
7058	7529	R	Phase-to-phase voltage L_{1-2}	V
7060	7530	R	Phase-to-phase voltage L_{2-3}	V
7062	7531	R	Phase-to-phase voltage L_{3-1}	V
7064	7532	R	Mean phase-to-phase voltage	V
7066	7533	R	Active power, 3-phase, 15, 30, 60 minutes (P1+P2+P3)	W
7068	7534	R	THD U1	%
7070	7535	R	THD U2	%
7072	7536	R	THD U3	%
7074	7537	R	THD I1	%
7076	7538	R	THD I2	%
7078	7539	R	THD I3	%
7080	7540	R	Cosine of U1 and I1 angle	-
7082	7541	R	Cosine of U2 and I2 angle	-
7084	7542	R	Cosine of U3 and I3 angle	-
7086	7543	R	Mean 3-phase cosine	-
7088	7544	R	Angle between U1 and I1	°
7090	7545	R	Angle between U2 and I2	°
7092	7546	R	Angle between U3 and I3	°
7094	7547	R	Neutral wire current (calculated from vectors)	A
7096	7548	R	Active 3-phase input energy (no. of register 7549 overflows, resets to 0 after reaching 99999999.9 kWh)	100 MWh
7098	7549	R	Active 3-phase input energy (counter counting up to 99999.9 kWh)	kWh
7100	7550	R	Active 3-phase output energy (no. of register 7551 overflows, resets to 0 after reaching 99999999,9 kWh)	100 MWh
7102	7551	R	Active 3-phase output energy (counter counting up to 99999.9 kWh)	kWh
7104	7552	R	Reactive 3-phase inductive energy (no. of register 7553 overflows, resets to 0 after reaching 99999999,9 kVarh).	100 Mvarh
7106	7553	R	Reactive 3-phase inductive energy (counter counting up to 99999.9 kVarh)	kvarh
7108	7554	R	Reactive 3-phase capacity energy (no. of register 7555 overflows, resets to 0 after reaching 99999999,9 kVarh).	100 Mvarh
7110	7555	R	Reactive 3-phase capacity energy (counter counting up to 99999.9 kVarh)	kvarh
7112	7556		reserved	
7114	7557		reserved	

7116	7558		reserved	
7118	7559		reserved	
7120	7560	R	Time – hours, minutes	-
7122	7561	R	Time – month, day	-
7124	7562	R	Time - year	-
7126	7563	R	Usage of ordered power	%
7128	7564	R	Voltage L1 min	V
7130	7565	R	Voltage L1 max	V
7132	7566	R	Voltage L2 min	V
7134	7567	R	Voltage L2 max	V
7136	7568	R	Voltage L3 min	V
7138	7569	R	Voltage L3 max	V
7140	7570	R	Current L1 min	A
7142	7571	R	Current L1 max	A
7144	7572	R	Current L2 min	A
7146	7573	R	Current L2 max	A
7148	7574	R	Current L3 min	A
7150	7575	R	Current L3 max	A
7152	7576	R	Active power L1 min	W
7154	7577	R	Active power L1 max	W
7156	7578	R	Active power L2 min	W
7158	7579	R	Active power L2 max	W
7160	7580	R	Active power L3 min	W
7162	7581	R	Active power L3 max	W
7164	7582	R	Reactive power L1 min	var
7166	7583	R	Reactive power L1 max	var
7168	7584	R	Reactive power L2 min	var
7170	7585	R	Reactive power L2 max	var
7172	7586	R	Reactive power L3 min	var
7174	7587	R	Reactive power L3 max	var
7176	7588	R	Apparent power L1 min	VA
7178	7589	R	Apparent power L1 max	VA
7180	7590	R	Apparent power L2 min	VA
7182	7591	R	Apparent power L2 max	VA
7184	7592	R	Apparent power L3 min	VA
7186	7593	R	Apparent power L3 max	VA
7188	7594	R	Power factor (PF) L1 min	-
7190	7595	R	Power factor (PF) L1 max	-
7192	7596	R	Power factor (PF) L2 min	-
7194	7597	R	Power factor (PF) L2 max	-
7196	7598	R	Power factor (PF) L3 min	-
7198	7599	R	Power factor (PF) L3 max	-
7200	7600	R	Reactive to active power ratio L1 min	-
7202	7601	R	Reactive to active power ratio L1 max	-
7204	7602	R	Reactive to active power ratio L2 min	-
7206	7603	R	Reactive to active power ratio L2 max	-
7208	7604	R	Reactive to active power ratio L3 min	-
7210	7605	R	Reactive to active power ratio L3 max	-
7212	7606	R	Phase-to-phase voltage L_{1-2} min	V
7214	7607	R	Phase-to-phase voltage L_{1-2} max	V
7216	7608	R	Phase-to-phase voltage L_{2-3} min	V
7218	7609	R	Phase-to-phase voltage L_{2-3} max	V

7220	7610	R	Phase-to-phase voltage L_{3-1} min	V
7222	7611	R	Phase-to-phase voltage L_{3-1} max	V
7224	7612	R	Mean 3-phase voltage (min)	V
7226	7613	R	Mean 3-phase voltage (max)	V
7228	7614	R	Mean 3-phase current (min)	A
7230	7615	R	Mean 3-phase current (max)	A
7232	7616	R	3-phase active power (min)	W
7234	7617	R	3-phase active power (max)	W
7236	7618	R	3-phase reactive power (min)	var
7238	7619	R	3-phase reactive power (max)	var
7240	7620	R	3-phase apparent power (min)	VA
7242	7621	R	3-phase apparent power (max)	VA
7244	7622	R	Power factor (PF) min	-
7246	7623	R	Power factor (PF) max	-
7248	7624	R	Reactive to active power ratio (3-phase mean min.)	-
7250	7625	R	Reactive to active power ratio (3-phase mean max.)	-
7252	7626	R	Frequency min	Hz
7254	7627	R	Frequency max	Hz
7256	7628	R	Mean phase-to-phase voltage (min.)	V
7258	7629	R	Mean phase-to-phase voltage (max.)	V
7260	7630	R	Active power, 3-phase, 15, 30, 60 minutes (min.)	W
7262	7631	R	Active power, 3-phase, 15, 30, 60 minutes (max.)	W
7264	7632	R	harmonic U1 / THD U1 min	V / %
7266	7633	R	harmonic U1 / THD U1 max	V / %
7268	7634	R	harmonic U2 / THD U2 min	V / %
7270	7635	R	harmonic U2 / THD U2 max	V / %
7272	7636	R	harmonic U3 / THD U3 min	V / %
7274	7637	R	harmonic U3 / THD U3 max	V / %
7276	7638	R	harmonic I1 / THD I1 min	A / %
7278	7639	R	harmonic I1 / THD I1 max	A / %
7280	7640	R	harmonic I2 / THD I2 min	A / %
7282	7641	R	harmonic I2 / THD I2 max	A / %
7284	7642	R	harmonic I3 / THD I3 min	A / %
7286	7643	R	harmonic I3 / THD I3 max	A / %
7288	7644	R	Cos of U1 and I1 angle (min.)	-
7290	7645	R	Cos of U1 and I1 angle (max.)	
7292	7646	R	Cos of U2 and I2 angle (min.)	-
7294	7647	R	Cos of U2 and I2 angle (max.)	-
7296	7648	R	Cos of U3 and I3 angle (min.)	-
7298	7649	R	Cos of U3 i I3 angle (max.)	-
7300	7650	R	Mean 3-phase cos (min.)	-
7302	7651	R	Mean 3-phase cos (max.)	-
7304	7652	R	U1 and I1 angle (min.)	°
7306	7653	R	U1 and I1 angle (max.)	°
7308	7654	R	U2 and I2 angle (min.)	°
7310	7655	R	U2 and I2 angle (max.)	°
7312	7656	R	U3 and I3 angle (min.)	°
7314	7657	R	U3 and I3 angle (max.)	°
7316	7658	R	Neutral wire current (min.)	A
7318	7659	R	Neutral wire current (max.)	A

When lower limit is exceeded, a -1e20 value is displayed. Conversely, when upper limit is exceeded, a 1e20 value is displayed.

9 ERROR CODES

During the meter operation, error messages may be displayed. Following list shows causes of particular errors.

- **Err1 –** too low voltage or current during measurement:
  - PF_i, $tg\varphi_i$, cos, THD — less than 10% U_n,
  - PF_i, $tg\varphi_i$, cos — less than 1% I_n,
  - THD — less than 10% I_n,
  - f — less than 10% U_n,.
  - $I_{(N),}$ — less than 10% I_n;
- **bAd Freq** – during THD measurement, when frequency value is outside 48 – 52 Hz range for 50Hz and outside 58 – 62 Hz range for 60 Hz;
- **Err bat** – internal RTC battery. The measurement is carried out after switching the supply on and every day at midnight. Then the message may be turned off by pressing the button. Then the message will be inactive until the meter is turned off and on again;
- **Err CAL, Err EE** – meter memory damaged. In such case meter should be sent back to the manufacturer.
- **Err PAr –** incorrect operational parameters of the meter. In such case meter should be set to default (factory) settings (from menu or via RS-485 interface). Message can be disabled by pressing button.
- **Err Enrg** – incorrect energy parameters. Message can be disabled by pressing button. Incorrect energy values are set to 0.
- **Err L3 L2** – phase sequence error. Switch phase 2 and phase 3 connections. Message may be disabled by pressing the button. Then the message will be inactive until the meter is turned off and on again;
- **- - - -** – lower limit exceeded. Measured value is lower that the lower measuring limit for a given quantity.
- **- - - -** – upper limit exceeded. Measured value is higher that the upper measuring limit for a given quantity or measurement error occurred.

10 TECHNICAL DATA

Measuring ranges and allowed base errors Table 11

Measured quantity	Indication range *	Measurement range	L1	L2	L3	∑	Base error
Current In 1 A 5 A	0,00 ... 1.5 kA 0,00 ... 60 kA	0,005 ... 1,200 A~ 0,025 ... 6.000 A~	•	•	•		±0,2% rng
L-N voltage 57.7 V 230 V 290 V	 0,0 ... 230.8 kV 0,0 ... 1.012 MV 0,0 ... 1.200 MV	 50 ... 64 V~ 195 ... 253 V~ 246 ... 300 V~	•	•	•		±0,2% in.m
L-L voltage 100 V 400 V 500 V	 0.0 ... 440 kV 0.0 ... 1.752 MV 0.0 ... 2.000 MV	 85 ... 110 V~ 340 ... 440 V~ 425 ... 520 V~	•	•	•		±0,5% m.q.
Frequency	47.0 ... 63.0 Hz	47,0 ... 63.0 Hz	•	•	•		±0,2% m.q.
Active power	-9999 MW ...0,00 W	-1,52 kW ...1,0	•	•	•	•	±0,5% rng

	... 9999 MW	W ... 1,52 kW					
Reactive power	-9999 Mvar ...0,00 var ... 9999 Mvar	-1,52 kvar ...1,0 var ... 1,52 kvar	•	•	•	•	±0,5% rng
Apparent power	0,00 VA ... 9999 MVA	1,0 VA ... 1,52 kVA	•	•	•	•	±0,5% rng
PF factor	-1 ... 0 ... 1	-1 ... 0 ... 1	•	•	•	•	±1 % rng
Tangent φ	-1.2 ... 0 ... 1.2	-1,2 ... 0 ... 1.2	•	•	•	•	±1 % rng
Cosine φ	-1 ... 1	-1 ... 1	•	•	•	•	±1 % rng
φ	-180 ... 180	-180 ... 180	•	•	•		±0.5 % rng
Active input energy	0 ...99 999 999.9 kWh					•	±0.5 % rng
Active output energy	0 ...99 999 999.9 kWh					•	± 0,5 % rng
Reactive energy	0...99 999 999,9 kVarh					•	± 0,5 % rng
Reactive energy	0...99 999 999,9 kVarh					•	± 0,5 % rng
THD	0...100%	0...100 %	•	•	•		± 5 % rng

*Depending on the setting of tr_U (voltage transformer ratio: 0.1 ... 4000.0
and tr_I (current transformer ratio: 1 ... 10000)

m.q. - error in relation to measured quantity

rng - error relevant to range value

Caution! Correct measurement requires L3 phase voltage higher than 0.85 Un.

Power consumption:

- in L1 and L2 voltage circuit ≤ 0,05 VA
- in L3 voltage circuit ≤ 3 VA
- in current circuits ≤ 0,05 VA

Display dedicated 3.5” LCD display,

Relay outputs **2** relays, volt-free NO contacts
current capacity 250 V~/ 0,5 A~ (a.c.)

Serial interface **/optional/** **RS485:** address 1..247
mode: 8N2, 8E1, 8O1,8N1
baud rate: 4.8, 9.6, 19.2, 38,4 kbit/s
transmission protocol: Modbus RTU
response time: 750 ms

Energy impulse output OC (NPN) output, class A passive, compliant with EN 62053-31; supply voltage 18...27V, current 10...27mA

Pulsing constant of OC output 5000 - 20000 pulses/kWh

independently of set tr_U, tr_I ratios

Protection grade of the casing

from the front IP 65
from behind the panel IP 20

Weight 0.3 kg

Dimensions 96 x 96 x 77 mm

Reference and rated operating conditions

- supply voltage /in L3 phase measurement circuit/:
  50 .. 64 V a.c. or 195 .. 253 V a.c. or 246 .. 300 V a.c.
  47 ...63 Hz
- input signal: 0 .. $\underline{0,005..1,2I_n}$ for current; $\underline{0,85..1,1U_n}$ for voltage;
  0 .. $\underline{0,01..1,2I_n}$; 0..$\underline{0,85..1,1U_n}$; for factors PF_i ,$t\varphi_i$
  frequency $\underline{47..63}$ Hz; sinusoidal (THD ≤ 8%)
- power factor $\underline{-1...0...1}$
- ambient working temperature -20..$\underline{23}$..+55 °C
- storage temperature -30..+70 °C
- humidity 25 ... 95 % (no condensation)

- max peak factor:
  - current 2
  - voltage 2
- external magnetic field $\underline{0...40}$...400 A/m

- short-term overload (5 s)
  voltage inputs 2 Un
  current inputs 10 In
- working position any
- warm-up time 5 min.

Real time clock battery: CR2032

Additional errors:

in % of the base error

- from input signal frequency < 50%
- from ambient temperature changes < 50 % / 10 °C
- for THD > 8% < 100 %

ND10 meter complies with following standards:

Electromagnetic compatibility:

- interference immunity acc. to EN 61000-6-2
- interference emission acc. to EN 61000-6-4

Safety requirements:
acc. to EN 61010-1

- circuit-to-circuit insulation: basic,
- installation category III,
- pollution level 2,
- max working voltage in reference to ground:
  - for power and measurement circuits: 300 V
  - for remaining circuits: 50 V
- altitude a.s.l. < 2000 m,

11 ORDERING CODES

ND10 network parameters meter ordering codes. Table 12

ND10 NETWORK PARAMETERS METER	X	X	X	XX	X	X
Current input I_n :						
1A (X/1)	**1**					
5A (X/5)	**2**					
Voltage input (phase/phase-to-phase) U_n:						
3x 57.7 / 100 V		**1**				
3x 230 / 400 V		**2**				
3x 290 / 500 V		**3**				
Digital input:						
wihout RS485 interface			**0**			
with RS485 interface			**1**			
Version:						
standard				**00**		
custom-made*				**XX**		
Language						
Polish					**P**	
English					**E**	
Other					**X**	
Acceptance tests						
without extra quality requirements						**0**
with an extra quality inspection certificate						**1**
acc. to customer's request*						**X**

* after agreeing with the manufacturer

ORDERING CODE EXAMPLE: code **ND10-2.2.1.00.E.1** means a meter with input range of 5 A, 3x 230/400 V, with RS485 interface, standard version, English language, with an extra quality inspection certificate.

Lubuskie Zakłady Aparatów Elektrycznych LUMEL S.A.
ul. Sulechowska 1, 65-022 Zielona Góra, Poland

Tel.: (48-68) 329 51 00 (exchange)
Fax: (48-68) 329 51 01
e-mail:lumel@lumel.com.pl
http://www.lumel.com.pl

Export Department:
Tel.: (48-68) 329 53 02
Fax: (48-68) 325 40 91
e-mail: export@lumel.com.pl

ND10-09/1